

ANWEISUNGEN ZUR SCHALTSPERRE

BILD 1

1. VERGEWISSERN SIE SICH, DASS DER SCHLÜSSEL IN DER ENTRIEGELUNGSPPOSITION VERTIKAL GEDREHT IST.
2. VERGEWISSERN SIE SICH, DASS DIE PLATTE LOSE UND NICHT FEST SITZT.
3. SCHRAUBE BIS ZUM ANSCHLAG HERAUSDREHEN UND ENTFERNEN, SCHRAUBE NICHT VERLIEREN.

BILD 2

1. DAS OBERE GEHÄUSE SANFT SCHIEBEN, OHNE DEN INNEREN MECHANISMUS ZU STÖREN.

BILD 3

1. KLAPPEN SIE DIE SCHALTSPERRE VORSICHTIG AUF NACH OBEN AUF.
2. HEBEN SIE DAS OBERE GEHÄUSE VORSICHTIG AB
3. DER VIERKANTSTIFT UND DIE BODENPLATTE SOLLTEN BEIM ÖFFNEN UND SCHLIEßEN IMMER FLUCHTEN.


BILD 4

1. ENTFERNEN SIE DIE SCHALTSPERRPLATTE MIT DER FEDER, VERLIEREN SIE DIE FEDER NICHT.
2. ENTFERNEN SIE AUCH DIE OBERE PLATTE.

BILD 5

1. NUN KÖNNEN SIE DEN UNTEREN TEIL DER SCHALTSPERRE AN DEN TUNNEL SCHRAUBEN.


WIEDERHOLEN SIE DIE ANWEISUNGEN IN UMGEKEHRTER REIHENFOLGE, UM ALLES WIEDER EINZUBAUEN.

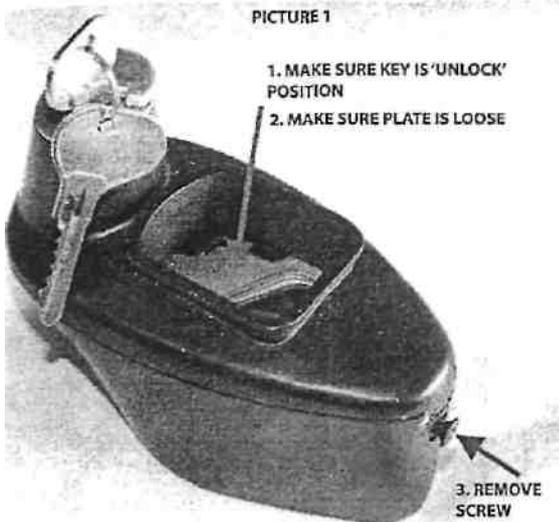

PICTURE 1


- 1. MAKE SURE KEY IS 'UNLOCK' POSITION
- 2. MAKE SURE PLATE IS LOOSE

3. REMOVE SCREW

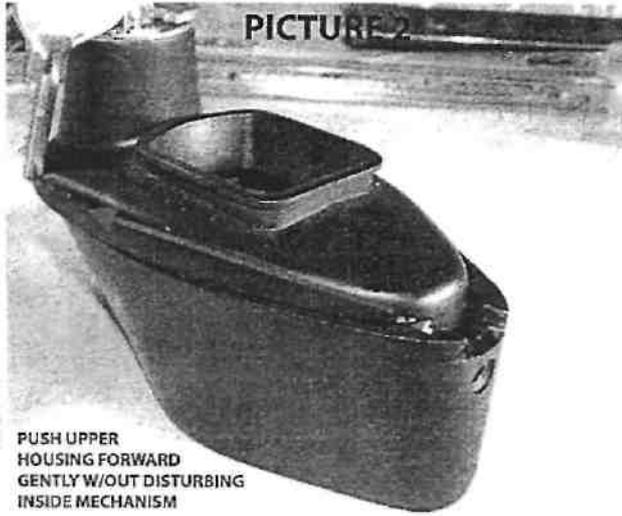

PICTURE 2


PUSH UPPER HOUSING FORWARD GENTLY W/OUT DISTURBING INSIDE MECHANISM

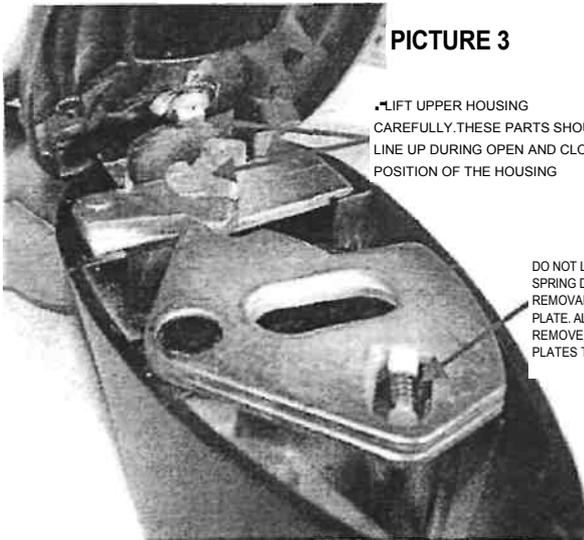

PICTURE 3

LIFT UPPER HOUSING CAREFULLY. THESE PARTS SHOULD LINE UP DURING OPEN AND CLOSE POSITION OF THE HOUSING


DO NOT LOOSE THE SPRING DURING REMOVAL OF LOCK PLATE. ALWAYS REMOVE THE TWO PLATES TOGETHER.

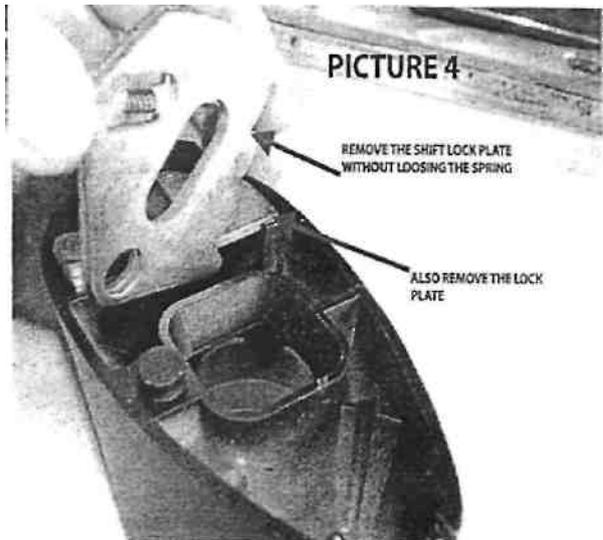

PICTURE 4

REMOVE THE SHIFT LOCK PLATE WITHOUT LOOSING THE SPRING

ALSO REMOVE THE LOCK PLATE

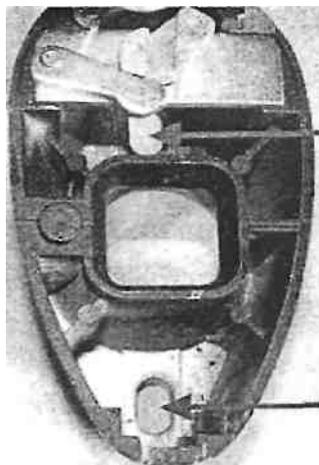

PICTURE 5

SCREWS PROVIDED TO BOLT ONTO THE TUNNEL